

Updated tools stock list 01 October 2017

Part Numbers	Description
89901	SPATULA
714223	EXTRACTOR
995000	TOOL MANUAL RELEASE
2558758	BRAKE CHANGE AXLE & THREAD PROTECTOR
2558759	BRAKE HANDLING TOOL
2558897	WHEEL GUIDE CONE
2558898	BRAKE GUIDE CONE
2558925	BLEED ADAPTOR
460001355	EXTRACTOR
460002502	CHARGING ADAPTOR
460005812	TORQUE ADAPTOR
460005832	SPRING EXPANDER
460005833	GROUND LOCK SLEEVE
460005834	TUBE SPANNER
460005835	GROUND LOCK SLEEVE
460005881	HOLDING BLOCK
460006211	LIFTING TACKLE
460006226	ALIGNMENT BULLET
460006227	ALIGNING PIN
460006404	TORQUE ADAPTOR
460006405	ASSEMBLY SLEEVE
460006407	TORQUE REACTOR
460006410	EXTRACTOR
460006412	ALIGNMENT PIN
460006437	HOLDING TOOL
460006440	EXTRACTOR
460006441	ALIGNMENT BULLET
460006442	HOLDING SPANNER
460006465	PEG - SPANNER
460006568	ALIGNMENT BULLET
460006641	SPACER
460006804	BLEED ADAPTOR
460007011	WRENCH AXLE NUT
460007012	WRENCH
460007013	CONE GUIDE
460007014	GROUND LOCK PIN
460007015	EXTRACTOR
460007019	SPACER
460007020	SPACER
460007021	WRENCH
460007022	SPANNER
460007023	GUIDE
460007024	SPANNER TORQUE LINK
460007027	MULTIPLIER
460007028	REACTOR
460007030	GUIDE CONE
460007032	GUIDE CONE
460007033	SPANNER A/LINK
460007035	GUIDE CONE
460007036	SPANNER TR LINK NUT
460007052	GUIDE CONE
460007053	SPANNER APEX NUT
460007054	SPANNER APEX NUT
460007071	SPANNER
460007102	LIFTING EQPT
460007103	FIXTURE HOLDING
460007111	DRIFT HOLDING
460007156	CHARGING ADAPTOR
460007157	SPANNER RETRACTION ACT
460007163	LOCATION ASSEMBLY
460007174	GROUND LOCK PIN
460007183	DOWEL - GUIDE PIN
460007196	TORQUE ADAPTOR MLG
460007229	ALIGNMENT BULLET
460007242	TORQUE REACTION ADAPTOR
460007253	PIN SPANNER
460007262	CHECKING GAUGE
460007271	TUBE SPANNER
460007272	TUBE SPANNER

Part Numbers	Description
460007279	PIN SPANNER
460007280	SLEEVE GROUND LOCK
460007284	PIN SPANNER
460007305	GAG - SHOCK ABSORBER
460007317	BELL CRANK RESTRAINT
460007319	REACTOR TUBE
460007320	REACTOR TUBE
460007325	GAG-SIDE STAY
460007326	CLAMP - SIDE STAY
460007327	CLAMP - SIDE STAY
460007328	SPRING EXPANDER
460007333	GUIDE CONE
460007334	ADAPTOR BOGIE NUT SPANNER
460007341	LOADING BULLET
460007360	GUIDE CONE
460007380	SPANNER APEX PIN
460007381	SPANNER APEX NUT
460007382	SPANNER
117E	PIN SET
15461-103	GROUND LOCK PIN
15MIT65B00717	WRENCH PYLON VALVE DRIVE
294864-1	WRENCH TRANSDUCER REMOVAL
2C14712G01	FIXTURE - POSITION
2C14734P01	PROTECTOR, FANSHAFT
2C14796G02	GAUGE BLADE LENGTH
2C14814P01	PROTECTOR
2C18012G02	FAN BLADE REM. TOOL
2C18012P17	NYLON CAP
2C6067P01	PROTECTOR
2C6075G03	PROTECTOR FAN DISC BORE
2C6275G01	TOOL, STRAIGHTENING RETAINER
2C6352P03	WRENCH
2C6352P04	WRENCH
2C6352P05	WRENCH
2C6367G01	TOOL INST / REM.
2C6866G03	T2 PROBE TYPE "K"
2C6894G04	TOOL, REMOVAL - FAN SPINNER
2C6920P01	FANBLADE TOOL
2C6933G01	TEMPLATE, BLEND-FAN BLADE STG. 1
2C6998G06	FIXTURE SET REM/ PIN
2C8063G01	INSPECTION GAUGE
2C8073P26	CAP
2ME65B00002	WRENCH - SPANNER
2MIT65B04011-41	SAFETY RIG & TOW PIN NLG
2PRE65B00161-1	PROTECTOR
30-1132004-00	GROUND SAFETY PIN
30HME65B89603-9	SPINDLE ASSY
3MIT65B00772	ADAPTOR - SUMP VALVE HOSE
3MIT65B90100	WRENCH SET
460003180-24	KEEP RING MLG SHOCK ABSORBER
460003180-74	RING - KEEP
460004331-24	DRIFT
460005171-95	POST ASSY
460005832-51	PIN SAFETY
460007026-1	REACTOR TUBE
460007026-2	REACTOR TUBE
4MIT65B80307-1	MULTIPURPOSE PROTRACTOR
558-1-05903	FUEL PUMP EXTRACTION TOOL
558-1-05903-002	FUEL PUMP REMOVAL TOOL
584-501	SWITCH MOUNTING TOOL
5E91-0020	PROTECTOR AXLE THREAD
5E92-0300	THREAD PROTECTOR
6137-013	PIN
6199-400	RIGGING PIN - YAW DAMPER UNIT
6ME65B00161-1	GROUND LOCK - WING & BODY GEAR
6MIT65B04002-4	SOCKET
701-2978000	RIGGING PIN
7ME65-73761-1	SPANNER WRENCH FWD TRUNNION
81100ST1-015003	ADJUSTMENT GAUGE

Part Numbers	Description
851-30486-508	SCREWDRIVER
851-30486-510	EXTRACTOR - LAMP CAPSULE
856A1012G01	LEVER ANTI-TORQUE HPC
856A1027G01	FIXTURE - LIFT
856A1029G01	FIXTURE - LIFT
856A1051G02	PULLER STATOR ACTUATOR ARM
856A1077G01	PIN SET GUIDE
856A1087G01	BRACKET SET HANDLING
856A1090G01	INSTALLER NOZZLE SEAL
856A1126G02	CRIVER SET HPC
856A1130G10	TOOL SET JACKSCREW
856A1130P11	JACKSCREW
856A1130P12	JACKSCREW
856A1216G02	PULLER
856A1221G01	PIN SET RIGGING
856A1336G02	TORQUE ADAPTOR
856A1352P03	PLASTIC CLIP HPTR
856A1352P04	CLIP - WIRE
856A1467G01	ADAPTOR PRESSURE CHECK
856A1469G01	WRENCH SET
856A1469G02	WRENCH SET
856A1471G02	BRACKET SET
856A1480G01	UNIT - ENG. PRESERVATION HMU
856A1494G01	FIXTURE - HANDLING
856A1498G01	ADAPTOR SET - RESTRAIN BOLTS
856A1612G01	ADAPTOR SET - AIR TUBE NUTS
856A1827G01	ADAPTOR SET, TORQUE HYDROMECHANICAL FUEL PUMP NUTS
856A2007P01	IGN TOOL
856A2329G01	STRAP SET
856A2501G01	RATCHET WRENCH
856A2537G01	PROTECTOR MTG PIN
856A2576G01	SPACERS SUPPT.
856A2609G01	BLOCK JACKING
856A2614G01	WRENCH VBV STOP MECHANISM
856A2629G01	TOOL SEALS FITTING
856A2632G01	TGB FLANGE PIVOTING
856A2662G01	TOOL KIT - MASTERS AIR NOZZLES
856A2663G01	ADAPTOR PULLER
856A2664G01	GAUGE SETTING VBV DOORS
856A2668G02	KIT,PULLER ADAPTOR
856A2673G02	TOOL-INSTALLATION ENERSEAL SEAL
856A2691G01	SPACERS REMOVAL PLIERS
856A2700G01	ADAPTOR PULLER FAN BLADE
856A2717G01	ADAPTOR LOCKING CORE ENG
856A2791G01	PULLER
856A2794G01	TOOL SET SEAL FITTING
856A2795P01	PULLER PLUGS OGV
856A2796G01	SAFETY PROTECTOR
856A2953G01	GUIDE PIN, STATOR ALTERNATOR
856A2954G01	PULLER
856A3108G01	PINS GUIDE NO.5 BRG. OUTER RACE
856A3114G01	WRENCH VBV ACT
856A3330G01	SEAL FITTING TOOL
856A3368G04	YOKE SETTING VBV
856A3385P03	WRENCH
856A3408G02	GAUGE YOKE
856A3409G01	PINS GUIDE SPINNER
856A3471P01	ADAPTOR
856A3471P02	ADAPTOR WRENCH
856A3500G01	PULLER BLADE SPACER
856A3509G01	ADAPTOR LOCKING AGB
856A3511G02	TOOL R/I SEAL
856A3557G01	TOOL SEAL FITTING
856A3560G01	BEAM HOIST FUEL PUMP
856A3576G01	TOOL R/I SEALS AGB
856A3576G02	TOOL R/I SEALS AGB
856A3591G01	PROTECTOR
856A3598G03	SUPPORT
856A3601G01	ADAPTOR DRAIN

Part Numbers	Description
856A3604P01	WRENCH HORIZ. DRIVE
856A3617G01	PULLER MAG PLUGS
856A3621G02	GUIDE PINS
856A3629P01	GAGE INSPECTION
856A3629P02	GAGE INSPECTION
856A3707G06	PULLER FAN BLADE SPACER
856A3707G07	PULLER - FAN BLADE SPACERS
856A3778G01	GUIDE PINS SPINNER
856A3779G02	PULLER PLATFORMS - FAN
856A3781G02	FIXTURE ADJ VBV DOORS
856A3782G02	WRENCH REMOVAL FAN
856A3900G01	TOOL REM / INST DETECTOR DMS
856A3919G01	HEATER - HOUSING BEARING 2
856A3923G03	PULLER-FAN BLADE SPACER LINE
856A3947G01	PULLER FAN BLADE SPACERS
856A4628G01	TOOL CHECK FAN BLADE ROOT OUT
856A5649G01	MIRROR INSP. FAN DISC
88-5914	HOSE, FUEL DRAIN
97A28002117002	PURGING TOOL
97A29102035000	CONNECTOR PRESSURISING
97A29102062000	CONNECTOR DEPRESS
97A29102090000	TOOL SET- I/R RING
97D34103000000	SENSOR TOOL
98A07004002000	ADAPTOR JACKING RIB
98A10001000000	COVER
98A10001005000	COVER PITOT
98A10001013000	COVER TOTAL TE
98A10001500000	COVER
98A24403000000	CABLE HOLDING STRAP
98A25207503000	ASSY PULLEY SEALING CORD
98A27003001000	RIGGING PIN
98A27103500000	TOOL - FTU PROTECTOR
98A27103500001	TOOL - FTU PROTECTION
98A27203500000	MEASUREMENT BASE (KASTAL 300)
98A27307549000	PIN RIGGING BELL CRANKS ELEVATOR CONTROL
98A27407514005	FIXTURE - STRUT HORIZ STAB A330 - 200 (SHRINK)
98A27504012000	EXTRACTOR FAIRING PIN
98A27504019000	BULLET FLAP
98A27504029000	BULLET
98A27508003001	RIG PIN SET
98A27508013000	DRIVE TOOL - 32 TEETH
98A27508034000	RIG PIN
98A27603002000	SAFETY COLLAR
98A27603007000	SAFETY COLLAR
98A27603008000	SAFETY COLLAR
98A27801001000	RIGGING PIN
98A27808003001	DRIVE TOOL - 24 TEETH
98A27808003200	ADAPTOR TORQUE SHAFT
98A27808003400	ADAPTOR TORQUE SHAFT
98A27901000000	PIN - RIGGING AILERON
98A27901002000	RIGGING PIN
98A28007570000	ADAPTOR DRAIN
98A28101000000	ADAPTOR DRAIN
98A28104000000	WATER DRAIN PURGER
98A28104000002	WATER DRAIN PURGER
98A28104031000	WATER DRAIN PURGER
98A28108465000	ADAPTOR -- WATER DRAIN
98A28201003000	WRENCH PUMP CANISTER
98A28203000000	JET PUMP
98A32301000000	RIGGING PIN
98A32301013000	RIG PIN - LDG
98A32401500000	RIGGING PIN BRAKING CONTROL
98A35207599000	HOSE ADAPTOR OXY MASK
98A49107504000	THREAD PROTECTOR
98A49107504001	THREAD PROTECTOR
98A52107632000	PIN - SAFETY SLIDE
98A52108009000	CRIMPING DEVICE
98A52307557000	VALVE
98A52307622000	MEASURING GAUGE

Part Numbers	Description
98A52307628000	LOCK CARGO DOOR ACT.
98A52307631000	DOOR GAUGE
98A52308008000	SOCKET WRENCH
98A52308009000	SOCKET WRENCH
98A52308010000	SOCKET WRENCH MDC DOOR
98A52308013000	RIGGING PIN
98A53003500000	WRENCH, UNSCREWING TOOL
98A57103013000	TAP TEST TOOL
98A57304002000	MAN HOLE BOLT EXTRACT
98AMS172321	HOOK WRENCH
98AMS172329	HOOK WRENCH
98AMS172344	HOOK WRENCH
98AMS172345002	WRENCH
98AMS172345003	SOCKET
98D07103500000	JACK ADAPTOR
98D07104000200	JACK PAD BOLT
98D07203002100	JACK ADAPTOR
98D08103501000	PLUM LINE - PYLON
98D10003003000	COVER SLIP ON ASSEMBLY
98D10007512000	COVER EXH. DUCT APU
98D10007513000	COVER - APU OIL COOLER OUTLET
98D10103500042	BLANKING DEVICE STATIC PORT
98D10103500043	STATIC PROBE COVER
98D10103501000	COVER ICE DETECTION PROBE
98D26203002052	PLUG
98D26203500000	DISCHARGE HEAD
98D27104000000	GUIDE CONE
98D27104000001	GUIDE CONE AILERON
98D27104002000	SUPPORT AILERON JACK
98D27104002001	SUPPORT AILERON ACTUATOR
98D27104004000	SLAVE PIN AILERON
98D27203001000	RUDDER NEUTRAL ADJ. TOOL
98D27203500000	TENS.REG.BRACKET RUDDER CONTR.
98D27207516000	RIG PIN SET - RUDDER CONTROL
98D27207516040	RIGGING PIN
98D27207516090	RIGGING PIN
98D27207516160	RIG PIN
98D27207516330	RIG PIN
98D27207545000	RIGGING PIN
98D27207546000	RIGGING PIN
98D27207547000	RIGGING PIN
98D27207548000	RIGGING PIN
98D27207549000	RIGGING PIN
98D27303000001	LOAD APPLICATION TOOL - ELEV. AILERON, RUDDER
98D27303001000	HOLDER SIDE STICK
98D27303001001	HOLDER - SIDE STICK
98D27303003001	TOOL - ELEVATOR RIGGING
98D27309003000	LOCKING DEVICE
98D27309004000	PIN INSTAL ELEVATOR
98D27309009002	LOCK ELEVATOR SERVO CONTROL
98D27403000000	HOLDING TOOL
98D27403500000	PITCH TRIM CONTROL LOCKING
98D27407502000	SUPPORT STRUT
98D27407505000	EXTRACTOR - CENTERING BUSH
98D27407517018	HOOK WRENCH
98D27407517110	GROOVE NUT WRENCH
98D27407517120	GROOVE NUT WRENCH
98D27407532000	RIGGING PIN THS MECH. CONTROL
98D27504002000	TOOL FLAP ADJUSTING
98D27504003001	TOOL FLAP ADJUSTING
98D27504004000	GUIDE - CARRIAGE PIN
98D27504005000	RIGGING PIN
98D27504006000	RIGGING PIN
98D27504008000	GO/NO GO GAUGE
98D27504009000	ADJUSTER - KINK SEAL
98D27504010000	ADJUSTER - KINK SEAL
98D27504028000	SPANNER
98D27504030001	LOCK TORQUE SHAFT
98D27504031000	PIN SETTING

Part Numbers	Description
98D27504032000	GUIDE - CARRIAGE PIN
98D27504033000	SLAVE PIN
98D27504035000	TORQUE ADAPTOR TRUNNION NUT
98D27504038000	KIT FLAP RIGGING
98D27504038001	KIT FLAP RIGGING
98D27504081000	TOOL - LAP ADJUST TR 2 & 3
98D27504082000	TOOL-FLAP ADJUST TRACK 4
98D27504083000	EXTRACTOR
98D27504084000	EXTRACTOR PIN TRACK 4
98D27504085000	TOOL FLAP ADJUSTING
98D27504095000	SPANNER
98D27504111000	SLAVE PIN TRACK 2 & 3
98D27504112000	SLAVE PIN - TRACK 4
98D27504114000	DISTANT GAUGES (INNER FLAP)
98D27504115000	DISTANCE GAUGE - OUTBOARD FLAP
98D27504116000	SLAVE PIN TRACK 2 & 3
98D27504117000	SLAVE PIN
98D27504118000	SPANNER FLAP ADJUSTING
98D27504119000	SPANNER - FLAP ADJUSTMENT
98D27507536000	SOCKET WRENCH - RETAINER NUT
98D27508625000	CHECK - PIN SET TRACK 1,2,3,4
98D27603001000	LOAD APPLICATION TOOL
98D27603002001	MAINTENANCE KEY
98D27604001000	SPOILER SUPPORT STRUT
98D27604002000	STRUT SUPPORT - SPOILER 1
98D27803000000	LOCKING TOOL
98D27803500001	TOOL ZERO LOCKING
98D27804001000	ADAPTOR - DRIVE SLAT & FLAP
98D27804005000	TOOL SETTING
98D27804006000	TOOL ALIGN & LOCKING SLAT TRKS
98D27804011000	BAR-TURNING
98D27804013000	GAUGE - GO / NO GO (SLATS)
98D27804015000	TOOL - BACKSTOP SLAT (TRACKS 5,6,7,8)
98D27804016000	TOOL - BACKSTOP SLAT (TRACK 9,10,11,12)
98D27903500000	PIN- SIDE STICK LOCKING
98D28004000000	SPANNER - OVERWING FILLER
98D28004002000	TEST EQUPT.
98D28104000000	PIPE ADAPTOR WATER DRAIN
98D28104000040	ADAPTOR- WATER DRAINING
98D28108293000	ADAPTOR - WATER DRAIN ACT
98D28207510000	SLIDE CONE-APU FUEL
98D28207510100	SLIDE CONE
98D29003502000	LP INFLATION TOOL
98D29207542000	SAFETY DEVICE RAT
98D29208246001	SAFETY DEVICE
98D32104005000	SPANNER L/E PINTLE
98D32104007000	CONE MLG ACTUATOR
98D32104013001	LIFTING TOOL
98D32104014000	GUIDE CONE
98D32104015000	GUIDE CONE
98D32104018000	SETTING TOOL UPLOCK
98D32104081000	TOOL SPHERICAL LOCATION
98D32104083000	RIGGING SPACERS
98D32104180000	TOOL - SPHERICAL
98D32104190001	MLG FWD & AFT PINT PIN R/I
98D32104190002	MLG FWD & AFT PINT PIN R/I
98D32109005000	BULLET, LOCATING MLG PIVOT BOLT
98D32203501000	GUIDE CONE - NLG
98D32203502000	SAFETY PIN NLG DOOR
98D32203503000	EXTRACTOR - NLG
98D32303000000	SOCKET SET - NLG ACT
98D32303000201	ADAPTOR WRENCH
98D32403001000	ADAPTOR - BRAKE UNIT NUT
98D32403002000	ADAPTOR BRAKE UNIT NUT
98D32403003000	DRIVING ADAPTOR
98D32403004000	DRIVING ADAPTOR
98D32403005000	DRIVING ADAPTOR
98D32403006200	PROTECTIVE CONE MLG
98D32403007200	PROTECTIVE CONE MLG

Part Numbers	Description
98D32603000000	SIMULATION PLATE
98D33403500000	ADJUSTING TOOL - TURN OFF LIGHTS
98D33403501000	ADJUSTING TOOL - TURN OFF LIGHTS
98D33403502000	ADJUSTING TOOL
98D34003500000	ADAPTOR COVERS STATIC PORT
98D34003500100	ADAPTOR COVERS STATIC PORT
98D34003500102	ADAPTOR COVER - STATIC PORT
98D34003500103	ADAPTOR COVER - STATIC PORT
98D34103002000	ADM / STANDBY SYSTEM PURGER TOOL
98D34103002100	ADM / STANDBY SYSTEM PURGER TOOL
98D34103003000	ADAPTOR PITOT PNEUMATIC CLEANER
98D38308234001	ADAPTOR PITOT PNEUMATIC CLEANER
98D49207534000	GUIDE TOOL - BOROSCOPE APU
98D49207537001	CABLE SAFETY APU GENERATOR
98D52003002000	GUIDE TOOL - BOROSCOPE APU
98D52003004001	SAFETY BARRIER
98D52103005000	SAFETY BARRIER
98D52103006000	RIGGING PIN
98D52103500000	PIN-SAFETY SLIDE ARMING
98D52207507000	SAFETY PIN
98D52207543000	SAFETY DEVICE
98D52207551000	RIGGING & SAFETY PIN EMERGENCY DOORS
98D52207552000	RIG PIN SLIDE REL. MECHANISM
98D52208282000	RIGGING & SAFETY PIN EMERGENCY DOORS
98D52307515000	SAFETY LOCK KIT
98D52307515100	SAFETY LOCK KIT
98D52307523001	HINGE PIN BOLT REMOVER A320 CARGO DOOR
98D52307524000	SUPPORT STRUT CARGO DOORS
98D52307525000	SUPPORT STRUT CARGO DOORS
98D52308308000	ADJ TOOL
98D53103000000	RIGGING PIN
98D53103500000	AOA SENSOR PROTECTIVE COVER
98D54003005000	PYLON EXTRACTOR
98D54003006000	CASTELLATED WRENCH
98D54403000000	DUMMY SHACKLES J.T.
98D54503000000	PYLON REMOVAL WRENCH SET
98D54503001000	PYLON REMOVAL WRENCH SET
98D56103001000	HOOK WRENCH ADAPTOR
98D56103002000	INSTALLATION TOOL
98D56103002200	WRENCH
98D56103002201	WRENCH REMOVAL SLIDING WINDOW
98D56103003000	WEATHER SEAL SPATULA
98D57004003001	SOCKET - FWD PINTLE NUT
98D57004009000	SOCKET
98D57004013000	HOOK / COVER
98D57004014000	HOOK / COVER
98D57004016000	HOOK , COVER
98D57004019000	SLIPPER BLOCK
98D57004019001	SLIPPER BLOCK
98D57004029000	SLIPPER BLOCK
98D57004033000	SPANNER
98D57004034000	R/I BRG FLAP SPANNER SET
98D57004037000	RI BRG FLAP SPANNER SET
98D57004081000	SPANNER - REM / INST BRG
98D71203004000	WRENCH REMOVAL REAR RODS ATTACH ENGINE
98D71203501211	WRENCH SET - AFT MOUNT
98D71203501318	HINGE PIN
98DNSA20206040	HINGE PIN
98DNSA20206060	RIGGING PIN
98DNSA20206080	RIGGING PIN
98DNSA20206120	RIGGING PIN
98DNSA20206150	RIGGING PIN
98DNSA20208040	RIGGING PIN
98DNSA20208060	RIGGING PIN
98DNSA20208080	RIGGING PIN
98DNSA20208100	RIGGING PIN
98DNSA20208120	RIGGING PIN
98DNSA20208150	RIGGING PIN
98F07101003000	RIGGING PIN

Part Numbers	Description
98F07103500001	JACK ADAPTOR
98F07104000206	BOLT - SHEAR HEX HEAD
98F07107501000	JACKING PAD SET - WING
98F10001000000	COVER ASSY AOA SENSOR
98F10001001000	BLANKING DEVICE - STATIC
98F10007509000	BLANKING DEVICE - STATIC
98F10008232000	PLUG - APU OIL COOLER
98F27003000000	PLUG - APU EXHAUST
98F27003001000	RIGGING PIN
98F27003500000	LOCKING TOOL - CABLE
98F27108294000	LOCKING TOOL - CABLE
98F27108438000	DISTANCE COLLAR
98F27201002000	A340-330 DISTANCE COLLAR - AILERON
98F27203502000	SAFETY PIN RUDDER
98F27207514000	LOCATING PIN
98F27207515000	RIG PIN BELL CRANK
98F27207516000	RIG PIN BELL CRANK
98F27207517000	RIG PIN CAR LE QUAD
98F27207518000	RIG PIN TRIM
98F27208312000	RIG PIN OVERRIDE
98F27309004000	RIGGING PIN
98F27401000000	PITCH TRIM CONTROL
98F27407504000	PITCH TRIM CONTROL
98F27407506000	TOOL SET - REM / INST THS
98F27508202000	PIN, RIG TENSION REGULATOR
98F27508206000	PIN FLAP INTERCON STR.
98F27508209000	PIN SET - NEUTRAL SETTING
98F27508209042	PIN SET FLAP
98F27508209044	PIN - TRACK 2,3,4,5
98F27508209046	RIGGING PIN
98F27508209048	PIN
98F27508230001	PIN
98F27508238002	GAGE - FLAP LOWER END STEP
98F27508238004	STOP CARRIAGE FLAP
98F27508257000	STRAP ASSY - TRACK 1
98F27508302000	STRAP ASSY - TRACK 1
98F27508378000	GAGE - TAP EXTERNAL
98F27608236003	BOLT SECURING
98F27608253000	RIG TOOL ACTUATOR SPOILER 1
98F27808205001	SAFETY COLLAR SPOILER
98F27808212000	GAUGE SLAT ZERO POS.
98F27808255001	DRIVE TOOL
98F29003500000	BLOCK SLAT GAPPING
98F29003502000	SPECIAL WRENCH
98F29208217000	SPECIAL WRENCH
98F32001003000	SAFETY PIN
98F32104001000	SAFETY PIN
98F32104002000	TOOL ALIGNMENT
98F32104007000	ALIGNMENT TOOL - PINTLE
98F32104013000	COLLAR MAIN DOOR ACT.
98F32104015000	COLLAR MAIN DOOR ACT.
98F32104017000	REM / INST TOOL ECCENTRIC PIN
98F32104019000	REM / INST TOOL ECCENTRIC PIN
98F32104026001	INHIBITOR CLG. UPLOCK
98F32104037000	COLLAR - LEG SUPPORT
98F32104041000	SAFETY COLLAR DOOR CLG
98F32104042000	PIN RIGGING
98F32201002000	PIN RIGGING
98F32201003000	GUIDE CONE
98F32201004000	SPANNER ACT. NLG
98F32201010000	GUIDE CONE SIDE STAY
98F32203000000	FITTING - ROTATING ROD R/I NLG
98F32204001001	COLLAR
98F32204003000	COLLAR - SAFETY
98F32301003000	GUIDE
98F32301011000	GUIDE BUSH PIN ROD/PIN CLG
98F32301015000	SAFETY COLLAR DOOR NLG
98F32301021000	HOLDING TOOL CLG DOOR
98F32301022000	BULLET SET - CLG DOOR PIN

Part Numbers	Description
98F32301031000	SPANNER - UPPER NUT ACTUATOR CLG
98F32303001000	SPANNER - ACTUATOR UPPER PIN
98F32304000000	FALSE TARGET
98F32304001000	LANDING GEAR SLUGS
98F32304003000	PLATE - SIMULATION
98F32703003200	WHEEL TOOL REM / INST.
98F34103000000	ADAPTOR PITOT PROBE
98F34103001000	ADAPTOR PITOT PROBE
98F34103001100	ADAPTOR PITOT PROBE
98F49208240000	ADAPTOR PITOT PROBE
98F49208240001	ADAPTOR TORQUE
98F52107520000	WRENCH EMERGENCY DOOR DAMPER
98F52208401000	WRENCH EMERGENCY DOOR DAMPER
98F52308227002	PIN SAFETY SLIDE
98F52308279000	BAR REM/INST ACT
98F52308330000	BAR REM/INST ACT
98F52308353000	SPANNER
98F52308354000	RIGGING PIN - FWD CARGO DOOR
98F52308355000	ADJ. TOOL - CARGO DOOR
98F52308356000	ADJ TOOL - CARGO DOOR SEQUENCE LEVER
98F52308357000	RIGGING PIN
98F52308358000	RIGGING PIN - CARGO DOOR LATCH, MECH
98F53301000000	WRENCH SMALL NUT
98F55109001000	SPECIAL WRENCH
98F55109006210	STUD
98F55109006216	GUIDE PIN
98F57004009001	GUIDE CONE SET
98F71201001102	HOLDING WRENCH
98F71201001104	ADAPTOR FOR A340 A/C
98F71201001106	ADAPTOR AFT
98F71201001108	HOLDING WRENCH
98F71201001110	ADAPTOR FWD
98F71201001116	TORQUE ADAPTOR.
99A34103000000	ADAPTOR BLANK
99A34103001000	ADAPTOR BLANK
99A34103002000	COVER ADAPTOR
99A34103004000	ADAPTOR BLANK
9C1202G02	TOOL REMOVE - SPACER FAN BLADES
A07001-11	JACK ADAPTOR FWD BODY
A07003-1	JACK ADAPTOR - O/B WING
A09003-2	STEERING BY- PASS PIN NLG TOWING
A12001-14	FUEL DRAIN TOOL
A12001-15	FUEL SAMPLING EQUIPT.
A12001-18	HANDLE & HOSE ASSY
A12005-1	LUBRICATION ADAPTOR
A12007-23	ADAPTOR - TYRE INFLATOR
A20005-9	CLAMP CABLE RIGGING
A21008-2	HOLD OPEN CABIN AIR OUTFLOW
A25020-8	GAGE INSP. SEAT TRACK
A27003-28	RUDDER LOCK
A27007-1	GROUND LOCK LE SLATS
A27009-7	LOCK FLAP
A27088-18	LINK- DUMMY, TRIM ACTUATOR, AILERON
A27092-106	ACTUATOR / DEACTUATOR SET
A27105-9	AUXILIARY DETENT - FLAP ADJ. ASSY
A27108-13	LOCK SET - SPOILER ACT.
A28002-6	DRAIN TOOL
A28008-1	DRAIN HOSE - SUMP VALVE
A28008-8	DRAIN HOSE - SUMP VALVE
A29002-6	LOCKING PIN - VALVE HYD RESERVOIR
A32004-1	WRENCH - ADAPTOR
A32012-13	WRENCH - WHEEL RETAINING NUT - MLG
A32014-1	DOWN LOCK - MLG/NLG
A32014-2	DOWN LOCK - MLG/NLG
A32015-9	INST/REM TOOL - DOWNLOCK MLG/NLG
A32022-1	PROTECTOR - AXLE, NLG
A32025-1	WRENCH ADAPTOR - WHEEL RET. AXLE NUT
A32030-18	MAIN DOOR SAFETY
A32030-21	LOCK

Part Numbers	Description
A32034-1	WRENCH NLG STEERING NUT
A32035-1	WRENCH - STEERING ACT. NLG
A32045-100	WRENCH
A32045-101	WRENCH
A32045-108	SNUBBING VALVE OPERATOR
A32045-114	WRENCH SPANNER R/I NLG AXLE NUT
A32045-25	WRENCH - SPANNER
A32045-92	WRENCH
A32045-94	WRENCH
A32066-1	DRAIN EQUIPT. - SHOCK STRUT MLG/NLG
A32069-7	WRENCH ADAPTOR - RETAINING NUT
A32075-10	ADAPTOR - ANTISKID TRANSDUCER
A32080-1	BRAKE DISCONNECT - FLIGHT DISPATCH
A32088-7	MAINTENANCE LOCK - RETRACTABLE TAIL SKID
A32095-1	WRENCH - BEARING RETAINING BOLT - MLG
A32095-2	WRENCH - BEARING RETAINING BOLT - MLG
A32097-3	AXLE PROTECTOR
A32098-13	THD PROTECTOR ASSEMBLY
A32098-2	NLG THREAD PROTECTOR
A32098-3	MLG THREAD PROTECTOR
A32101-1	WRENCH ADAPTOR - AXLE NUT - NLG
A32102-25	SET PROXIMITY SENSOR ACT.ADJ.
A34001-4	WARNING EQUIPMENT
A35001-8	SAFETY PIN ASSY
A35002-7	PSU OXYGEN DOOR RET.
A38003-20	TOILET BLOCKAGE REMOVAL TOOL
A38007-9	PLUG - VACUUM WASTE SYSTEM
A49002-1	LIFTING EYE - APU GENERATOR
A49002-2	LIFTING EYE - APU GENERATOR
A52016-47	GAGE
A71034-1	WRENCH AFT FLIGHT MOUNT
A78002-1	THREAD PROTECTOR
A78002-9	THREAD PROTECTOR KIT
A78019-18	FILTER ASSEMBLY
A97011	WRENCH
AB-B999-30SE1	INSTALL TOOL - FUEL FILTER
AC21822000	GUIDE CONE
AC21858200	HOSE DRAIN
APV7821-00-0G	CINCHING DEVICE
B07001-7	ADAPTOR - JACKING FWD BODY
B07001-9	BOLT
B07002-1	ADAPTOR - A/P STAB.
B12004-1	FUEL SAMPLING RECEPTACLE
B20004-21	LEVER ACCESS PANEL SCREW
B24001-120	HOIST EQPT
B27007-15	SPOILER ACTUATOR LOCK
B27009-12	LOCK ELEV.
B27009-2	LOCK ASSY PCA
B27009-3	LOCK ASSY - INPUT LINK
B27010-5	LOCK - AILERON ACTUATOR
B27013-21	BLOCK ASSY
B27050-28	STAB.TRIM DRIVE TOOL
B28001-13	VALVE REMOVER
B28001-5	ADAPTOR SUMP DRAIN VALVE
B28002-1	FUEL DRAIN TOOL
B28003-1	PULLER - MAIN TANK BOOST PUMP
B28004-1	SOCKET - INST/REM COLLIMATOR SLEEVE
B28009-1	ALIGNMENT EQUIPT. - FUEL SHUT OFF VALVE
B28009-13	PIN
B32001-2	SPACER
B32001-4	DOWNLOCK-MLG & NLG
B32010-15	PROTECTOR SET
B32010-16	MAIN WHEEL SPANNER
B32010-3	THREAD PROTECTOR
B32010-4	LOCK EQUIPT. - DOOR ACT. - MLG
B32010-5	MAIN AXLE PROTECTOR
B32010-6	CAP
B32012-45	LOCK EQUIPT. - DOOR ACT. NLG
B32021-1	NLG PROTECTOR B757

Part Numbers	Description
B32035-10	ANTI SKID TRANSDUCER TOOL SET
B36003-2	BAR
B49004-7	THREAD PROTECTOR
B52004-1	ADAPTOR - No.1 & No. 2 CARGO DOOR ROTARY ACT.
B52008-1	SAFETY PIN SET
B52009-1	SAFETY PIN MAIN DOOR RESERVOIR
B52023-5	SPANNER WRENCH
B54014-1	LOCK - 'C' DUCT ACT. RB211 ENG.
B71025-9	ROD SAFETY C DUCT
B71040-26	STRAP END
B71040-28	LIFTING PIN
B78001-1	LOCK ASSY KIT
B78001-2	DE-ACT PIN ST/ST
B78001-3	PIN LOCK ISOLATION VALVE
B78006-1	BAR, RIGGING
B78008-16	SPANNER WRENCH
C07002-1	JACK ADAPTOR
C07004-1	JACK ADAPTOR
C07007-19	JACK FITTING FWD BODY
C07007-21	BOLT
C12002-7	DRAIN HOSE - SURGE TANK SUMP
C12004-6	SPRING B/SCREW LUB ATTACHMENT
C12005-5	OIL GUN
C22783	LOCK PIN
C23157100-1	GROUND SAFETY PIN
C27001-16	GROUND LOCK SET - OUTBD ACT 737-200
C27001-36	LOCK ASSY
C27001-43	LOCK ASSY (SINGLE)
C27008-22	LOCK EQPT. ACT CONTROL FLAP
C27019-1	TAB BENDING EQPT. - LOCKING WASHER LE SLAT ACT.
C27022-1	CLAMP SET - TE FLAP TORQUE TUBE
C27025-1	TORQUE WRENCH EQPT. RUDDER PCU ATTACH
C27028-21	RIGGING BAR - ELEVATOR TAB
C27030-49	TEST EQPT. FLAP SCREW BACKLASH
C27032-1	MEASURE EQPT. STAB
C27033-1	RETAINER NUT SPANNER WRENCH
C27038-6	LE SHUT OFF VALVE LOCK
C27041-6	WRENCH - COUPLING SLEEVE
C27042-1	TORQUE WRENCH EQPT. RUDDER PCU ATTACH
C27045-1	RIGGING EQPT. - SLAT
C27046-13	SET - LOCK INBD GROUND
C27047-2	SPOILER LOCK
C27047-44	SHORT LOCK ASSEMBLY
C27047-45	LONG LOCK ASSY
C27051-1	LE DEVICE LOCK SET
C27051-2	FLAP LOCK ASSEMBLY
C27052-25	TE FLAP SLING EQPT
C27057-1	RUDDER LOCK
C27060-1	ADAPTOR EQPT CONTROL
C27064-1	STAB TRIM TORQUE ADAPTOR
C27066-1	LOCK EQPT. - AILERON/ELEVATOR PCU INPUT ROD
C27069-12	RIGGING EQPT.
C27078-1	MEASUREMENT TOOL - STAB SYSTEM
C28002-9	SPANNER - WRENCH SUMP VALVE
C28003-1	ADAPTOR - SUMP DRAIN CENTRE WING TANK
C32002-1	RING COMPRESSOR NLG INNER CYL.
C32010-1	WRENCH - HYD ACT MLG
C32011-7	SOCKET EQPT. - BRAKE DISCONNECT VALVE
C32012-12	REM / INST EQPT. MLG / NLG WHEEL NUT
C32012-13	MLG SOCKET ASSY
C32013-1	TORQUE WRENCH ADAPTOR
C32017-9	THREAD PROTECTOR
C32018-1	SEAL PROTECTOR
C32018-2	MLG SEAL GUIDE HALF
C32021-1	WRENCH SET - RET. NUT REM/INST ANTISKID TRANSD.
C32022-17	THREAD PROT. EQPT. MLG/NLG AXLE
C32022-18	MLG AXLE THREAD PROTECTOR
C32022-2	NLG AXLE THREAD PROTECTOR
C32022-20 (-21)	THREAD PROT. EQPT. - MLG/NLG AXLE

Part Numbers	Description
C32022-3	AXLE PROTECTOR
C32023-1	WRENCH
C32025-7	SPANNER WRENCH - GLAND NUT NLG
C32026-1	DOWNLOCK EQUIPT. - NLG/MLG
C32029-45	PIN INST / REM KIT MLG
C32030-10	OLEO LOCK ASSY MLG NLG
C32031-1	REM / INST AFT TRU PIN
C32040-6	SPANNER WRENCH - NLG STEERING COLLAR RETAINER
C32043-1	WRENCH - RET. NUT, NLG STEERING VALVE
C32048-1	ADAPTOR ASSY - UPLOCK MLG
C32050-1	FWD & AFT TAIL SKID LOCK LINK
C35003-10	RETRACTION EQUIPMENT
C38001-1	DRAIN MAST PLUG - WASTE WATER
C38001-23	DRAIN MAST PLUG - WASTE WATER
C47248	GUIDE CONE
C47261	WRENCH NLG
C47281	SAFETY COLLAR
C47465	RIG PIN
C47578	PROTECTOR
C47621	LOCATING PIN
C47647	EXTRACTOR
C47648	ADAPTOR
C47943	ADAPTOR
C47944	WRENCH
C49006-1	THREAD PROT. EQUIPT. - APU MOUNT BOLTS
C49007-36	HOIST EQPT - AUX POWER UNIT
C49007-42	HOIST EQUIPT. - AUX. POWER UNIT
C52008-1	WRENCH
C54005-1	REM/INST EQUIPT. - FUSE PIN, NACELLE STRUT
C54015-1	SPANNER WRENCH
C55009-1	ALIGNMENT TOOL
C56001-1	TORQUE SOCKET
C71001-1	WRENCH CONEBOLT
C71003-249	PIN
C71003-26	ATTACH PIN
C71006-10	ENGINE MOUNT PROTECTOR FWD
C71006-6	THREAD PROTECTOR SET
C71006-9	THREAD PROTECTOR
C71018-1	ALIGNMENT GUIDE - CONE BOLT, FWD ENG. MOUNT
C71019-7	AFT MOUNT NUT WRENCH
C71022-6	MOUNT NUT WRENCH
C75001-1	SWITCH - DETENT SYSTEM TEST
C76001-10	RIGGING PIN
C78001-13	HOLD OPEN ROD - T/R
C78004-1	LOCKPIN EQUIPT. - T/R
C78004-2	LOCK PIN
C78005-53	THRUST REVERSER COWL OPENING PUMP
C78006-1	ACTUATOR LOCK ASSY T/R ACT
C78010-1	LATCHING TOOL, T/R 'C' DUCT HALVES
C78012-14	HOLD OPEN EQUIPT. - T/R
C78014-6	WRENCH SET - T/R HINGE
C78016-1	LATCHING LEVER, T/R COWLING
C78019-15	HOLD OPEN EQUIPT. T/R COWL
C78020-14	LATCHING TOOL, T/R 'C' DUCT HALVES
C78021-1	HOLD OPEN EQUIPT. T/R COWL
C78023-1	LOCK ASSY T/R ACTUATOR
C78025-21	ACT. INST/REM TOOL
CAT5616-4	WRENCH GLAND NUT
CAT5618-4	CONE GUIDE
CP20007	TRUNNION BOLT
CP20011	TRUNNION BOLT
CP21534	PIN LIFTING
CP22814	SPHERICAL BUSH
CP22816	PIN ASSY
CP22817	PIN
CP22818	PIN
CP22819	PIN
CP22838	SPHERICAL
CP23256	TRUNNION

Part Numbers	Description
CP24245	SCREWED PIN
CP25016	LABEL
CP25192	SHOULDER BOLT
CP25193	SPHERICAL BUSH
CP25443	STARBD HEAD RB211-524B4 REAR SUPPORT ARM
CP26138	BRACKET FRONT LOWER
CP30086-4	STAND - LIP FAN MODULE
CP30341-2	PARKING / SLINGING FRAME - COLD THRUST REVERSER
CP30350/1	ADAPTOR HANDLING AFT ENGINE
CP30379/8	ADADPTOR - FAN CASE RB211 - 535C & E4
CP30379/8 DET 3, 11, 13	HANDLING ADAPTOR- FAN CASE
D17961-101	LOCK PIN
D23080000	LOCK PIN
D23156000	LOCK PIN
D23304000	LOCK PIN
D46237	LOCK COLLAR
D46486	ADAPTOR
DRT67088	TORQUE SPANNER
DRT67093	TOOL - HOLDING
DRT68032	TORQUE ADAPTOR
DRT68958	BRAKE ROD SPACER
DRT68959	BRAKE ROD SPACER
DZZ0003-1	SAFETY STRUT SPOILER
DZZ7291-1	ADAPTOR-TORQUE HORIZ. STAB. SPLINE
E2J52189	ENGINE TURNING TOOL
E2J57129	TURNING TOOL IP SYSTEM
E2J60592	CRIMPING PLIERS
E71516-00	PLIERS - FIRING PIN
EMAGDWG109902-3	LINK & BALL LOCK PIN
ES750-51	GAUGE PDU ROLLER WEAR
F26588000	LOCKING TOOL
F27220000	HOISTING DEVICE
F70038	WRENCH ASSY - MECH. NUT DOOR HANDLE
F70085	WRENCH - SPANNER, BRG. RET. NUT
F70109	WRENCH ASSY
F70199-15	VALVE COVER
F70199-52	INFLATION TOOL
F70207-108	KIT - RIGGING PIN
F70207-109	KIT - RIGGING PIN
F70207-128	RIGGING PIN
F70207-135	KIT RIGGING PIN
F70207-139	RIG PIN KIT
F70300-1	ADAPTOR
F70312-26	CROWFOOT WRENCH
F70326-1	TORQUE WRENCH ADAPTOR
F70336-1	SPANNER WRENCH - ASST. HANDLE M/ENTRY DOOR
F71136-146	SHEAR PIN
F71139	JACK ADAPTOR
F71267	WRENCH ASSY PINION G
F71292-17	PROTRACTOR STAND
F71313-7	WRENCH - ROD BEARING
F71336-501	LOCK ASSY STAB TRIM
F72719-500	TOWING EYE BOLT ASSY - MAIN GEAR
F72732	GROUND LOCK PIN
F72735	GROUND LOCK ASSY
F72735-13	STEERING BY-PASS PIN ASSY
F72790	PROTRACTOR MOUNT ASSY
F72849-1	ADAPTOR ASSY - BRAKE INST / REM
F72867-1	ADAPTOR ASSY - CONTR. WHEEL
F72913-10	AXLE & THREAD PROT. MAIN & NOSE GEAR
F72913-11	PROTECTOR
F72913-14	AXLE & THREAD PROT. MAIN & NOSE GEAR
F72913-15	AXLE & THREAD PROT. MAIN & NOSE GEAR
F72913-2	PROTECTOR B727
F72913-3	AXLE & THREAD PROT. MAIN & NOSE GEAR
F72913-4	AXLE & THREAD PROT. MAIN & NOSE GEAR
F72913-5	AXLE PROTECTOR NLG B727
F72913-8	AXLE & THREAD PROT. MAIN & NOSE GEAR
F72942-1	LUBRICATION SET DOORS

Part Numbers	Description
F72959-34	WRENCH
F72959-40	SPANNER WRENCH MLG
F72977-26	ADAPTOR
F72977-52	ADAPTOR
F80000-7	JACKING ADAPTOR FWD FUSE - 1MD
F80001-1	PAD - AIRCRAFT JACKING
F80012-1	ADAPTOR ASSY PIN SPANNER
F80013-1	ADAPTOR ASSY - PIN SPANNER
F80016-19	LOCK ASSY - MAIN OLEO
F80017-19	LOCK ASSY GROUND/FLT SPOILERS
F80017-33	LOCK ASSY GROUND/FLT SPOILERS
F80018-1	WRENCH SPANNER
F80018-2	SPANNER WRENCH MLG BRG
F80020-5	ADAPTOR - WRENCH
F80027-18	LOCK ASSY
F80032-1	WRENCH ADAPTOR
F80033-1	SPANNER GLAND NUT
F80033-8	ADAPTOR ASSY - WRENCH, HOOK SPANNER
F80039-46	PIN
F80040-15	LOCK ASSY - GROUND SPOILER ACT.
F80048-84	LOCK L/E SLAT
F80048-89	LOCK ASSY - LE FLAP & SLAT ACT.
F80048-90	LOCK ASSY - LE FLAP & SLAT ACT.
F80049-46	LOCK ASSY - FLIGHT CONTROLS
F80049-56	LOCK ASSY - FLIGHT CONTROLS
F80053-1	FACE LONG SPANNER
F80060-6	JACK PAD
F80109-9	LOCK ASSY - T/R ISOLATION VALVE
F80115-1	MLG THREAD PROT. & ALIGN TOOL
F80115-10	THREAD PROT. & ALIGNMENT TOOL
F80115-11	THREAD PROTECTOR
F80115-12	THREAD PROTECTOR
F80115-13	THREAD PROTECTOR
F80115-14	THREAD PROT. & ALIGNMENT TOOL
F80115-16	THREAD PROTECTOR
F80115-17	THREAD PROT. & ALIGNMENT TOOL
F80115-2	THREAD PROT. & ALIGNMENT TOOL
F80115-4	THREAD PROT. & ALIGNMENT TOOL
F80115-9	THREAD PROT. & ALIGNMENT TOOL
F80118-24	DETENT PIN
F80141-1	THREAD PROT. & ALIGNMENT PIN MLG
F80153-1	SAFETY PIN - ELEV.
F80158-17	TRUNNION PIN & BEARING PULLER KIT
F80162-1	CLAMP - NOSE GEAR STEERING ACT. ROD
F80164-28	LATCH BOLT ASSY
F80167-13	TOOL SET LUBE
F80168-1	SOCKET - AXLE NUT
F80168-2	MLG AXLE SPANNER
F80168-3	SOCKET - AXLE NUT
F80169-1	SPRING EXPANDER SET 737 MLG
F80176-8	WRENCH ADAPTOR
F80183-1	THREAD PROTECTOR
F80196-1	CHECKING BAR - ELEVATOR MACH TRIM ACTUATOR
F80198-14	E GAUGE NLG
F80201-1	DRAIN TOOL - FUEL SUMP
F80202-1	ALLEN ADAPTOR - NOSE WHEEL STEERING CYL
F80258-1	FUEL LEAK CHECKING TOOL
FE171901	TOOL-LOCKING
G12001-50	RIGGING PIN KIT
G27001-1	LOCKING TOOL INBD SPOILER
G27002-1	LOCKING TOOL INBD SPOILER
G27024-1	FLAP LOCK ASSY
G27032-8	ACT. LOCK - O/B SPOILER
G28010-1	HORIZ. STAB SUMP DRAIN
G32001-4	TYRE VALVE REMOVAL
G32007-1	PROTECTOR AXLE
G32007-8	AXLE PROTECTOR ASSY
G32007-9	THREAD PROTECTOR ASSY
G32008-1	PROTECTOR THREAD

Part Numbers	Description
G32008-2	PROTECTOR AXLE THREAD MLG
G32008-5	THREAD PROTECTOR MLG / NLG B747 (UNDERSIZED)
G32039-25	WRENCH - WHEEL RETENTION NUT W/BLG B747-8
G38004-10	TOILET UNBLOCK TOOL
G38004-13	BLOCKAGE REMOVAL TOOL
G49007-5	THREAD PROT. EQPT. APU RET. BOLTS
G54014-1	ADAPTOR - PIVOT BOLT
G71021-16	DRIVE EXTENSION - STARTER VALVE & PRSOV
G76002-15	PROTRACTOR - T/REV LEVERS
GSE00037	SAFETY SLEEVE
HC22891	INSERT TOOL
HIX1003	HANDLING FIXTURE
HIX3002-0G	HOLD OPEN ROD
HIX3005	SAFETY SLEEVE
HIX3008	LOCKOUT PIN
HTC73-75PPCW	PITOT COVER
HTC-74/76-PP	PITOT PROBE COVER
HTC74-76PPCW	PITOT COVER
HTC-75/77-PP	PITOT COVER
HU14808	PILOT SCREW
HU15974	HOLLOW CUTTER
HU18040	TAPER REAMER
HU19036-1	IMPACT EXTRACTOR
HU19522	LIFTING TOOL
HU19547	SWAGING TOOL
HU19641	SWAGING TOOL
HU19647	SWAGING TOOL
HU19648	SWAGING TOOL
HU19655	SWAGING TOOL
HU19657	SWAGING TOOL
HU21018	BACK CONING CUTTER
HU21610	SPRING CLIP
HU23267	REACTING PLATE
HU23991	SPANNER
HU24045	ROUGHING CUTTER
HU24400	SETTING GAUGE
HU24503	SUPPORT PLATE
HU25597	EXTRACTOR
HU26507	SETTING BLOCK
HU26558	LOCATION RING SPHERICAL
HU26559	LOCATION RING SPHERICAL
HU26562	LOCATION RING SPHERICAL
HU26579	LOCATION RING SPHERICAL
HU26723	SPHERICAL GAUGE
HU26731	SPHERICAL GAUGE
HU26733	SPHERICAL GAUGE
HU26735	SPHERICAL GAUGE
HU26850	TAPER REAMER
HU26895	SPANNER
HU26929	WRENCH CROW FOOT
HU27074	SPHERICAL GAUGE
HU27524-1	BAR REACTOR - FUEL
HU27553	PRESSURE TEST PLUG
HU27605	SLIP GAUGE
HU27606	SLIP GAUGE
HU28096-1	PROTRUSION GAUGE
HU28445	SPANNER
HU28647	SPANNER LATCH
HU29091	COUNTERSINK TOOL
HU29255	EXTRACTOR
HU31261	DRAIN TOOL
HU31811	ADAPTOR
HU32144	CRIMPING PLIERS
HU33096	CRIMPING PLIERS
HU33543	RIGGING PIN
HU34316	SOCKET
HU34332	PRESSING TOOL
HU34782	CLAMP RING
HU35451	EXTRACTOR - NOSE SPINNER FAIRING

Part Numbers	Description
HU37594	EXTRACTOR ADAPTOR
HU37693	POSITIONER
HU37694	MANDREL
HU37801	REACTION BAR
HU37848	REACTION BAR - PIG TAIL PIPE NUT
HU38122-3	IP TURNING TOOL
HU38642	EXTRACTOR - NOZZLE
HU38837	CRIMPING PLIERS
HU39037-1	GAUGE IGNITER IMMERSION CHECK
HU39311	BAR - REACTION
HU39312	BAR - REACTION
HU39483	INSERTER - FAN BLADE FILLERS SEALING STRIPS
HU39652	EXTRACTOR - ADAPTOR
HU40025	ENGINE TURNING TOOL
HU40324	TURNING TOOL - ROTATE
HU40619	PROTRUSION GAUGE
HU41551	ADAPTOR - EXTRACT
HU41620	ASSEMBLY TOOL
HU51409	LEVER - OPEN
HU55007-1	ADAPTOR HANDLING
HU87113-1	RESTRAINT H/OPEN DEV.
HU87127	EXTRACTOR R/I No. 2
HU87128	EXTRACTOR R/I NO.3&4
HU87129	EXTRACTOR R/I No. 5 HINGE
HU87131-1	EXTRACTOR LOCK WASHER
HU87132	COLLAR PIVOT
HU89025-1 DET 5	ADAPTOR
IAE1F10003	PUSHER (CARBON SEAL)
IAE1F10004	PUSHER (CARBON SEAL)
IAE1F10007	PULLER
IAE1F10008	PULLER (CARBON SEAL)
IAE1F10009	PULLER (CARBON SEAL)
IAE1F10010	PULLER (CARBON SEAL)
IAE1F10011	PIN HANDLING
IAE1F10032	PUSHER
IAE1F10067	PULLER
IAE1F10069	PULLER
IAE1F10070	PUSHER, INSTALLATION
IAE1F10072	PUSHER
IAE1F10082	GUIDE - COVER SCAVENGE OIL
IAE1J12000	BRACKET FWD ENG ASSY
IAE1J12016	WRENCH SPECIAL
IAE1J12018	WRENCH
IAE1J12020	LEVER PULLER
IAE1J12106	PIN - ALIGNING
IAE1J12125	HAMMER,SLIDING - INLET CONE FAIRING
IAE1J12141	BOLT-PUSHER ENG. FRONT RET. RING
IAE1J12188	BOLT PULLER
IAE1J12511	WRENCH
IAE1J13400	WRENCH
IAE1J13504	PULLER REMOVER
IAE1N20010	PIN LOCKOUT
IAE1N20023	TORQUE ADAPTOR TOOL
IAE1N20049	PIN LOCKOUT ACTUATOR
IAE1P16042	ADAPTOR LEAK TEST
IAE1P16092	GAGE IGNITER
IAE1P16139	WRENCH
IAE1P16184	KNOCKER HPT BOROSCOPE PLUG
IAE1P16376	PIN LOCATING
IAE1P17045	SPANNER ADJUSTABLE
IAE1R18000	WRENCH
IAE1R18001	WRENCH
IAE1R18002	WRENCH
IAE1R18003	WRENCH
IAE1R18254	RIGGING PIN
IAE1R18282	RIGGING PIN
IAE1R18423	RIGGING PIN
IAE1R18685	ADAPTOR - INHIBITING RIG
IAE1R18891	RIG PIN

Part Numbers	Description
IAE1R18892	RIGGING PIN
IAE1R18893	RIG PIN
IAE1R18894	RIG PIN
IAE1R18895	PIN RIGGING
IAE2J12030	TUBE, GUIDE-ENG. ASSY-BOROSCOPE
IAE2J13056	MEASURING GAUGE
IAE2P16204	TUBE BORESCOPE GUIDE
IAE3J12813	TEMPLATE TRIMMING
IAE3J13516	GAUGE SETTING
IAE3J13517	GAGE
IAE3R19469	CUTTER PROFILE
IAE3R19574	PROFILE GAUGE
J07001-25	JACK FITTING - FWD BODY
J07001-27	BOLT
J07002-1	JACK FITTING - INNER WING
J07003-1	JACK FITTING - OUTER WING
J10001-14	PLUG SET - VENT
J21006-1	LOCK HOLD OPEN - OUTFLOW VALVE
J21008-7	DESPATCH EQPT - COVER PLATE RAM AIR INLET
J25001-5	LEVER - STOWAGE - BIN RELEASE
J27003-1	DRIVE ADAPTOR - TORQUE TUBE COUPLING LE SLAT
J27010-44	ADAPTOR - CONTROL WHEEL
J27010-56	ADAPTOR-CONTROL WHEEL
J27015-1	SPLINE ADAPTOR - LE/TE POWER DRIVE UNIT
J27028-14	LOCK - RUDDER & ELEV
J27028-21	LOCK - RUDDER & ELEV. POWER CONTR. UNIT
J27038-11	GAUGE ASSY
J27043-18	CLAMP EQPT. - DRIVE SHAFT TE FLAP
J27046-1	CLAMP SHAFT L/E SLAT DRIVE
J27074-1	SPANNER WRENCH - TORQUE TUBE, INBD MAIN FLAP
J28012-1	DRAIN HOSE
J28013-1	DRAIN HOSE
J32007-1	PROTECTOR
J32007-2	PROTECTOR EQPT.
J32007-8	PIN
J32011-3	DOWNLOCK MLG (FLYAWAY)
J32011-4	DOWNLOCK NLG (FLYAWAY)
J32011-7	DOWNLOCK EQPT - NLG
J32012-18	PULLER EQPT. BRAKE
J32028-1	LOCK PIN EQPT
J32028-2	LOCK PIN NLG
J32028-3	LOCK PIN NLG
J32031-3	SLEEVE
J32032-22	WRENCH EQPT. WHEEL RET. NUT MLG
J32032-23	WRENCH
J32034-1	TURNBUCKLE MLG TRUCK POSIT. ACT.
J32060-1	DRAIN EQPT. OLEO STRUT MLG/NLG
J32071-10	LOCKOUT PIN
J32076-13	SLING EQPOT
J47200	HOLDING BLOCK
J47201	ADAPTOR
J47548	AXLE PROTECTOR A320 / A321
J47548-1	AXLE PROTECTOR
J47549	AXLE NUT WRENCH NLG A320
J47554	GUIDE CONE
J47555	EXTRACTOR
J47556	EXTRACTOR
J47557	GUIDE CONE
J47558	EXTRACTOR
J47562	EXTRACTOR
J47563	EXTRACTOR
J47565	EXTRACTOR
J47566	WRENCH
J47587	GUIDE CONE
J47588	GUIDE
J47779	PROTECTOR
J47969	WRENCH
J47999	GUIDE CONE
J51005-2	INST/REM ADAPTOR. FUSELAGE DRAIN VALVE

Part Numbers	Description
J52003-1	BARRIER DOOR FWD ACCESS
J52003-2	BARRIER - SAFETY, ACCESS DOOR
J52021-1	SCREW EQPT. - SAFETY PASS. DOOR
J71001-62	HOIST PIN
J71033-109	HOLD OPEN EQPT
J78005-1	THREAD PROT. - GE90/P&W/RR
J78005-10	THREAD PROTECTOR
J78005-5	THREAD PROT. GE90/P&W/RR
J78006-1	HOLD OPEN EQPT. T/REV
M21862	EXTRACTOR BRG. CUP
M21930	NLG CHARGING TOOL
M46196	MOUNTING & ADJUSTMENT PLATE
M46198	FILLING ASSY
M46200	FALSE JAWS
M46201	WRENCH
M46214	ADJUSTMENT TOOL
M46292	ADAPTOR - BRAKE CHANGE+G48
M46706	WRENCH ADAPTOR
M46707	AXLE PROTECTOR
M46789	SPACER WASHER
M47099	GUIDE CONE
M47154	GUIDE PIN
M47157-100	WRENCH ADAPTOR
M47380-100	AXLE PROTECTOR
M47381	THREAD PROTECTOR A330
M47382	GUIDE CONE
M47382-100	GUIDE CONE
MG174-04	DISASSEMBLY TOOL
MH12730	PRESSURE BLANK
MH12731	ADAPTOR - PRESSURE TEST
MH14242	TOP ELECTRODE
MHW1253	ELECTRODE
MHW1629	ELECTRODE
MIT65B01218	TORQUE ADAPTOR.
MIT65B01221-1	SPLIT GUIDE
MIT65B50452	REMOVAL TOOL CEILING PANEL
MIT65B90315	TORQUE ACCESS DOOR LATCHES
MIT65B90363	ADAPTOR - LINK
MIT65B90620	INDICATOR FLAG
MIT65B97230	WRENCH EXT. SOCKET
MSE-54	FAN BLADE TOOL
OU131281	PIN - RIGGING
OU144765	WRENCH - AILERON SERVOCONTROL AD
OU144768	HOLDING WRENCH - AILERON SERVO
OU144963	SPANNER
OU144966	TORQUE SETTING ADAPTOR
OU145409	SPECIAL WRENCH
OU145413	CONE MOUNTING THS ACTUATOR
OU145506	MOUNTING CONE
OU145914	DRAIN TOOL
OU145920	DRAIN TOOL
OU147991	PEG SOCKET WRENCH
OU190360	RIGGING PIN
OU190363	OIL FILLING TOOL
OU190364	OIL DRAIN TOOL
OU190365	TOOL BRAKE TESTING
OU190686	BALL SCREW TOOL
OU190834	TOOL - ZERO LOCATION
OU190844	TOOL - BRAKE RELEASE
OU190857	JAMMING TOOL
OU190863	TOOL - BACKLASH CHECKING THS AC
OU190864	TOOL RIGGING SPOOL CONT. OUTPUT
OU191066	ZERO LOCATION TOOL
OU191067	RIGGING PIN
OU191068	RIGGING PIN
OU191069	JAMMING TOOL
OU191191	CONTROL SCREW & BAR THSA320
OU191192	CHECKING TOOL
P1908	WRENCH - SOCKET B757 NLG

Part Numbers	Description
P-1922	WRENCH - SOCKET B737 NLG
PRE65B00780-1	THREAD PROT. CONE BOLT APU
PRE65B18295	PROTECTOR
PRE65B19900	PROTECTOR
PRE65B40136-1	PROTECTOR PITOT STATIC PROBE
PWA32165-2	WRENCH
PWA33647	PROTECTOR
PWA35952	SEAL FUEL NOZZLE
PWA45211	JACK SCREW
PWA45222	PULLER - KNOCKER
PWA75871	PULLER - COLLECT
PWC41200-9	FIXTURE - BLADE
Q21983	HANDLING TOOL
Q46098	GUIDE CONE
Q46099	WRENCH
Q46100	ADAPTOR
Q46108	ADAPTOR
Q46110	PIN
Q46111	GUIDE
Q46111-100	GUIDE CONE
Q46498	TOOL - PISTON COMP.
Q46500	INSTALLATION TOOL
Q46814	GUIDE CONE
Q46815	GUIDE CONE
Q47316	GUIDE CONE
Q47334	ADAPTOR A321 AXLE NUT
Q47734	GUIDE CONE
Q47749	PIN
Q47963	BRAKE TOOL
Q47964	INSTALLATION TOOL
Q47965	INSTALLATION CONE
R46014	WRENCH
R46729	AXLE PROTECTOR
R46738	GUIDE CONE
RSE1098	WRENCH SET- AFT ENGINE
RSE1098-1	SPANNER WRENCH
RSE1098-3	SPANNER WRENCH
RSE1098-5	SPANNER WRENCH
RSE1117	THREAD PROTECTOR
RSE3473	SAFETY SLEEVE
RSE3475	LOCKOUT PIN
RSE3490	THREAD PROTECTOR
RSE3492	PRIMARY LOCK TOOL
SAL12	NLG AXLE - NUT ADAPTOR
ST1212E-1.000	HOLE SAW
ST1212E-1.125	HOLE SAW
ST1212E-1.187	HOLE SAW
ST1212E-1.437	HOLE SAW
ST1212E-1.750	HOLE SAW
ST1212E-1.797	HOLE SAW
ST1212E-1.920	HOLE SAW
ST1212E-2.000	HOLE SAW
ST1212E-531	HOLE SAW
ST1212E-750	HOLE SAW
ST1212E-812	HOLE SAW
ST1212E-875	HOLE SAW
ST1212E-938	HOLE SAW
ST2580-163A	SPANNER TYPE WRENCH
ST2580-202	MLG TRUNNION LINK SPANNER
ST2580-242	MLG TRUNNION LINK SPANNER
ST2580-302	WRENCH SPANNER
ST848R	TOOL - REMOVAL O RING
ST8842	TAP TEST TOOL
ST918A-500-1000	BEARING INST
ST927C-1	BEARING REMOVAL TOOL
ST927C-10	BEARING REMOVAL TOOL
ST927C-108	BEARING REMOVAL TOOL
ST927C-11	BEARING REMOVAL TOOL
ST927C-112	BEARING REMOVAL TOOL

Part Numbers	Description
ST927C-114	BEARING REMOVAL TOOL
ST927C-12	BEARING REMOVAL TOOL
ST927C-121	BEARING REMOVAL TOOL
ST927C-125	BEARING REMOVAL TOOL
ST927C-127	BEARING REMOVAL TOOL
ST927C-13	BEARING REMOVAL TOOL
ST927C-131	BEARING REMOVAL TOOL
ST927C-137	BEARING REMOVAL TOOL
ST927C-14	BEARING REMOVAL TOOL
ST927C-145	BEARING REMOVAL TOOL
ST927C-146	BEARING REMOVAL TOOL
ST927C-15	BEARING REMOVAL TOOL
ST927C-16	BEARING REMOVAL TOOL
ST927C-17	BEARING REMOVAL TOOL
ST927C-18	BEARING REMOVAL TOOL
ST927C-19	BEARING REMOVAL TOOL
ST927C-20	BEARING REMOVAL TOOL
ST927C-21	BEARING REMOVAL TOOL
ST927C-22	BEARING REMOVAL TOOL
ST927C-23	BEARING REMOVAL TOOL
ST927C-4	BEARING REMOVAL TOOL
ST927C-7	BEARING REMOVAL TOOL
ST927C-78	BEARING REMOVAL TOOL
ST927C-83	BEARING REMOVAL TOOL
ST927C-84	BEARING REMOVAL TOOL
ST927C-86	BEARING REMOVAL TOOL
ST927C-9	BEARING REMOVAL TOOL
ST991A-2	SCRIVET REMOVAL TOOL
ST992B	GREASE ADAPTOR
ST9999CL	FAX COWL LATCH TOOL
T520621	DECEL ADJ TOOL
T535791	LOCKING PLATE
T720456	VALUE LOCKING TOOL
T-92321	O-RING INSERTER
U21828010	EXTRACTOR
U21828100	EXTRACTOR
U21830000	EXTRACTOR PINTLE/PINS NLG A330
U21841000	EXTRACTOR
U21842000	EXTRACTOR
U21891000	FILLING ASSY
U21895200	HANDLING TOOL
UT1152	SOCKET SPANNER
UT1226	LEAD
UT1277	PIPE RIGID
UT1315-1	RIG PIN
UT562	KEY SPANNER
UT630-2	WRENCH
UT632	WRENCH
UT818	WRENCH
UT819	WRENCH
UT856/1	WRENCH
UT893	WRENCH
UT894	WRENCH
UT895	WRENCH
UT896	WRENCH
UT923	SPANNER
XUT37344-A	EXPANDING EXTRACTOR
XUT37656	EXTRACTOR
Z1064	OXYGEN CHARGING ADAPTOR
Z1065	OXYGEN CHARGING ADAPTOR
Z1066	OXYGEN CHARGING ADAPTOR
Z1067	OXYGEN CHARGING ADAPTOR